 


THE BULLET

Bluetooth Speaker with NFC Technology

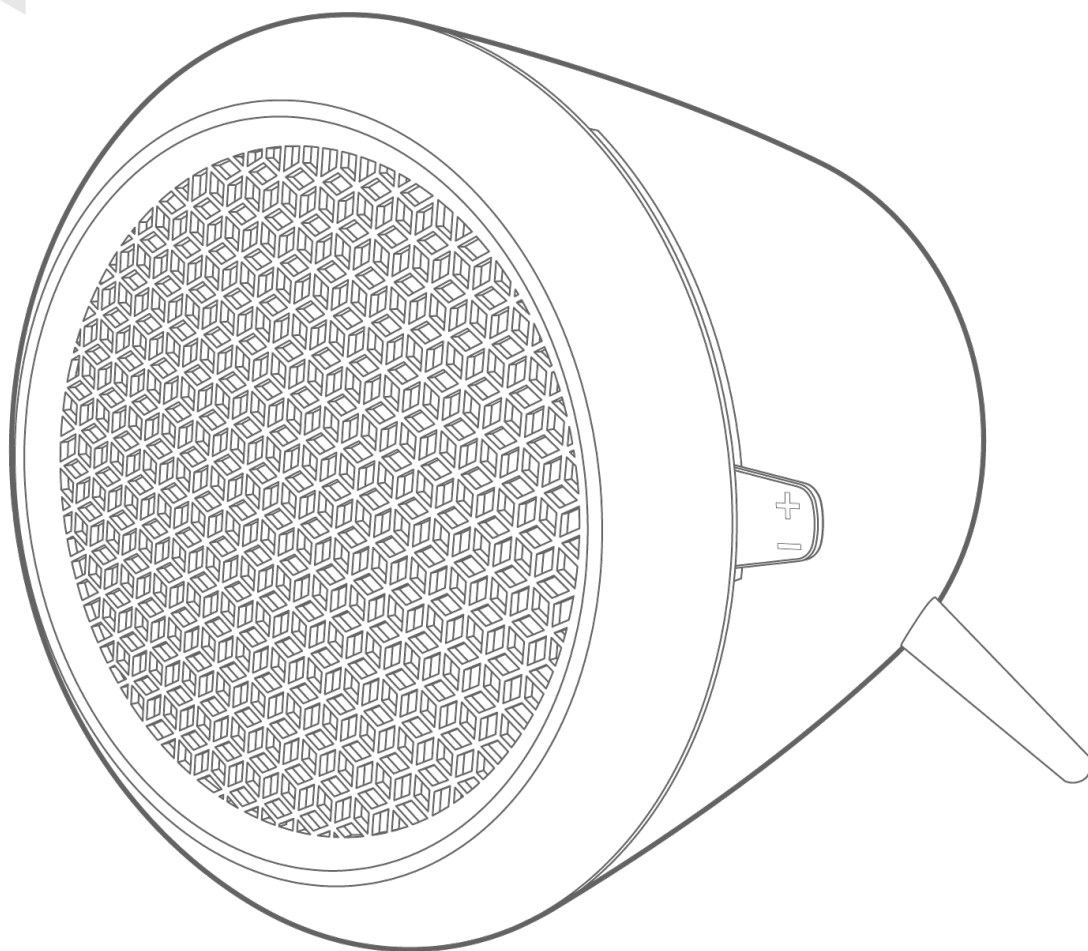

Instruction Manual

Dear Customer,

 
Thank you for purchasing an IRC product. We are pleased that you have chosen one of our products. At the same time, we are confident that you will find your new product to your complete satisfaction in many years ahead.

IRC is rooted in Denmark, Scandinavia, renowned worldwide for its modern minimalistic design style. Since 2001, IRC has produced and designed digital audio products characterized by an outstanding appearance, advanced technology, ease of use and based on open platforms from world leading suppliers.

At IRC, we care about the environment. To avoid paper waste, the product manual is to be found on the attached USB memory stick. We hope you enjoy the attached key hanger as well.

To keep you updated with new software upgrades or new functionalities to your product, we kindly ask you to visit our website www.ircgo.com and register your product. We promise only to contact you by email in case of important information in regards to your product.

For all registered users, we will offer you a great designed remote control, for your product with 30% discount. When you're registered, you will receive information about the offer.

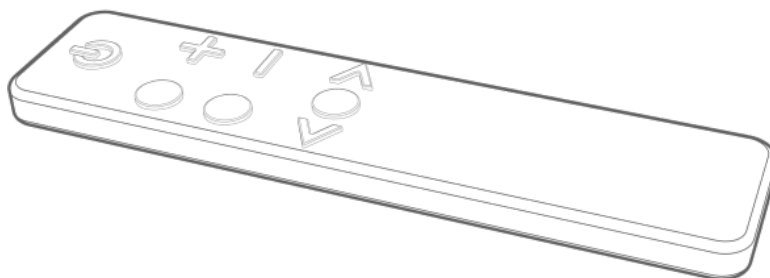

Please note – we expect the remote control to be on the market in April/May 2015.

 
Should you have any questions or concerns please do not hesitate to contact us at info@ircgo.com.

All the best

The IRC team

You can follow our journey, on social media Facebook www.facebook.com/ircgo and Twitter https://twitter.com/IRC_Nordic.

Important Safety Instructions

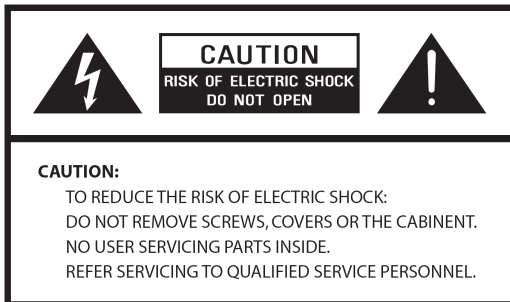

1. Read these instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use the speaker near water.
6. Clean only with dry cloth.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS SPEAKER TO RAIN OR MOISTURE.

To reduce the risk of electrical shock, fire, etc.:

1. Do not place unit near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
2. Do not block any ventilation openings of unit.
3. The unit shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the unit.
4. Do not place any heavy loads onto the unit, and do not step on it, the load may fall and cause serious injury to the unit.
5. Please read Rating Labels at the back of unit for power input and other safety information.
6. This unit is intended to be used only with the power supply provided.
7. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at any point where they exit from the unit.
8. Never unplug your unit by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
9. Repair or replace all electric service cords that have become frayed or otherwise damaged immediately. Do not use a cord that shows cracks or abrasion damage along its length, the plug, or the connector end.
10. To prevent fire or shock hazard, do not use this plug with an extension cord or other outlet unless the blades can be fully inserted to prevent blade exposure.
11. During lightning or raining days, unplug the unit for additional protection during thunderstorms or when the unit is not used for prolonged periods. This will prevent damage to the unit from lightning and power surges.
12. Do not attempt to carry out any service work yourself. By opening or removing the cabinet, you may be exposed to dangerous voltage or other hazards. Any service work should be carried out by qualified technicians.
13. The normal function of the product may be disturbed by strong Electro-Magnetic Interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in other location.
14. The means of disconnecting this apparatus from the mains supply is plug of adapter. The disconnect device shall remain readily operable.
15. In the interests of safety and to avoid unnecessary energy consumption, never leave the unit switched on while unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Switch it off and disconnect the mains plug from the mains socket.
16. The battery of remote control shall not be exposed to excessive heat such as sunshine, fire or the like.
17. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Contents

| | |
|---|----------|
| Important Safety Instructions | 2 |
| Contents | 3 |
| Getting Started | 4 |
| Unit Top View | 4 |
| Unit Front View | 4 |
| Unit Back View | 4 |
| Switching Mode | 5 |
| Volume Control | 5 |
| Indicator light | 5 |
| Bluetooth Mode | 5 |
| Pairing the Speaker with Bluetooth device | 5 |
| Resetting Bluetooth memory | 5 |
| NFC (Near Field Communication)..... | 6 |
| Aux in Mode..... | 6 |
| Troubleshooting..... | 6 |
| Specifications..... | 7 |
| Warranty | 8 |

Getting Started

Carefully remove your Bluetooth Speaker from the box. You may wish to store the packaging for future use.

What you can find inside of your package

- Main unit
- Power adapter
- Remote control
- Instruction manual

 
Positioning your Speaker

Place your Speaker on a flat / stable surface that is not subject to vibrations.

Avoid the following locations:


- Where the Speaker will be exposed to direct sunlight.
- Where the Speaker will be close to heat radiating sources.
- Where the humidity is high and ventilation is poor.
- Where it is dusty.
- Where it is damp or there is a possibility of water dripping or splashing onto unit.

Unit Top View

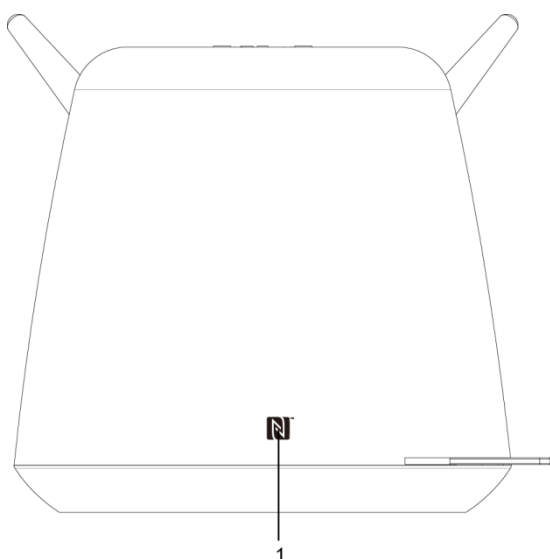


1. NFC sensor (Inside unit).

 Unit Front View

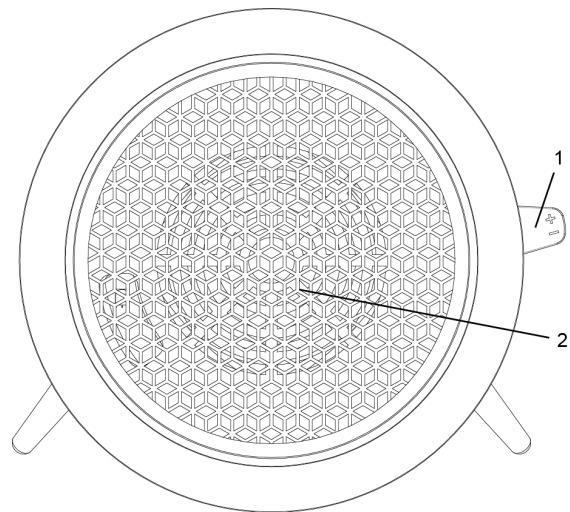

1. **VOLUME +/- dial**
2. Speaker

 Unit Back View

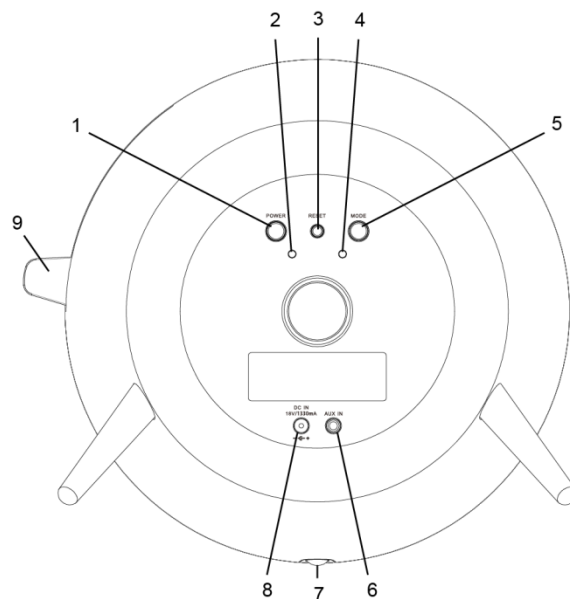

- | | |
|---------------------------|---------------------------|
| 1. POWER button | 6. AUX IN socket |
| 2. POWER indicator | 7. Infrared ray sensor |
| 3. RESET button | 8. DC IN socket |
| 4. MODE indicator | 9. VOLUME +/- dial |
| 5. MODE button | |

Turning the Speaker On/Off

Connect the plug at the end of power adapter cable to the **DC IN** socket on the back of the Speaker. Then insert the power adapter into the mains socket. Press **POWER button** to turn the Speaker on or off.

Switching Mode

Press **MODE button** to switch between Bluetooth and Aux in modes.

Volume Control

Adjust the Speaker volume by scrolling the **VOLUME +/- dial**.

Indicator light

| Indicator | Light | Indication |
|------------------------|----------------------|--|
| POWER indicator | Off | The Speaker is power off. |
| | Red | The Speaker is power on. |
| MODE indicator | Blink slowly in Blue | The Speaker is in Bluetooth mode and it is in the process of connecting via Bluetooth to another device. |
| | Blue | The Speaker is in Bluetooth mode and it has already connected by Bluetooth to another device. |
| | Green | The Speaker is in Aux in mode. |

Bluetooth Mode

Press **POWER button** to turn the Speaker on.

The **MODE indicator** will start blinking blue light as the speaker searches for devices to pair with via Bluetooth.

Pairing the Speaker with Bluetooth device

1. Switch the Speaker to Bluetooth mode.
2. Activate your Bluetooth device and select the search mode.
3. 'Bullet' will appear on your Bluetooth device.
4. Select 'Bullet' and enter "0000" for the password if necessary.
5. The Speaker will indicate that the pairing is complete when the blue light of **MODE indicator** stops flashing and remains lit.
6. Play your audio as you would normally use your device.
7. To pair the speaker with another Bluetooth device you will first need to disconnect the already connected device by selecting "Forget device" from your device's Bluetooth settings. Once this is done you can set up a new connection by going through steps 1 to 5 again

Resetting Bluetooth memory

Press and hold **RESET button** for 5 seconds to clear Bluetooth pairing information.

NFC (Near Field Communication)

NFC enables you pair and connect with Bluetooth devices in an easy way.

1. Press **MODE button** repeatedly to select Bluetooth mode.
2. Make sure that your NFC is turned "On" on your mobile device.
3. Hold your mobile device about 2cm close to NFC sensor on top panel for receiving an auto-connection between your mobile device and Speaker.
4. Your device then will turn-on Bluetooth automatically and will pair your device with Speaker. No additional settings are necessary.

Aux in Mode

AUX IN allows for quick and easy connection to an MP3 player or other external audio sources.

1. Before connecting to the mains socket, use a 3.5mm audio cable (not supplied) to connect to your external audio device through the **AUX IN** socket on the back of Speaker.
2. Connect power adapter to mains socket, press **POWER button** to switch Speaker on.
3. Press **MODE button** until **MODE indicator** lit Green light to select Aux in mode.
4. In Aux in mode, you may operate your audio device directly for playback features.
5. To gain optimal volume levels, adjusting the output volume level on the audio device as well is recommended.

Troubleshooting

| Problem | What to do |
|-----------------------------------|---|
| No Power | Check that the system is connected to a working mains outlet. |
| No Bluetooth connection | <p>Make sure your Bluetooth device is discoverable.</p> <p>Your Bluetooth device may be out of range, try moving it closer to the Bluetooth Speaker.</p> <p>Make sure your Bluetooth device supports the transfer of audio.</p> <p>Move your Bluetooth device and/or Bluetooth Speaker away from other devices that generate electromagnetic interference.</p> <p>If possible, turn off all other nearby Bluetooth devices or disable their Bluetooth functionality.</p> <p>Turn the Bluetooth Speaker off and back on.</p> |
| No Sound in Bluetooth Mode | <p>Turn off or disable Bluetooth on all other paired devices nearby and reconnect the device you want to hear.</p> <p>Make sure your Bluetooth Speaker is not muted.</p> <p>Your Bluetooth device may be out of range, try moving it closer to the Bluetooth Speaker.</p> <p>Turn the Bluetooth Speaker off and back on.</p> |
| No Sound in Aux in Mode | <p>Make sure your connected device is on and playing.</p> <p>Make sure your Bluetooth Speaker is in Aux in mode.</p> <p>Make sure the 3.5mm plug is fully inserted into the Bluetooth Speaker.</p> |

Specifications

| Items | Specifications |
|------------------------------------|---|
| Description: | Bluetooth Speaker |
| Power Adapter Requirements: | AC Input: 110-240V~, 50-60 Hz DC Output: 18V, 1330mA |
| Audio Output Power: | 20W rms |
| Power Consumption: | 24W (Max) |
| Dimension (W x H x D): | 220mm x 220mm x 215mm |



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. For more information, please contact the local authority or your retailer where you purchased the product.

Warranty

IRC Nordic guarantees warranty according to existing legislation comprising manufacturing and material defect which may be identified by normal use of the article.

The warranty does not cover errors, damages or wear, directly or indirectly, caused by improper operation, poor maintenance, force, bashes or drops or unauthorized operations malfunction due to connection to any equipment – damages related to fire, short circuits, etc. Claims about deficiencies and lapses, which are to be identified by ordinary testing of the article, must be notified to the relevant store within a reasonable period of time. The article can subsequently be handed in for repair.